

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING!

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.
- Please keep this manual as it contains important information.

Please keep this manual. It contains important information.

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium is the registered trademark of Intel Corporation.



0605-0

www.bratzpack.com
www.bratzpetz.com

TM & © MGA Entertainment, Inc.
BRATZ™, BRATZ PETZ™, LIL' BRATZ™,
BRATZ BABYZ™, and all related logos, names,
characters, distinctive likenesses and slogans
are the exclusive property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 USA
(800) 222-4685

PRINTED IN CHINA

The Preferred method of contact for
Customer Service is through our e-mail
contact form at www.mgae.com



BEFORE YOU BEGIN

In order to operate and save songs on your Liptunes™ MP3 player, you will need to use a home computer that meets the following system requirements:

- Compatible with Microsoft® Windows® 98SE, ME, 2000 or XP
- Pentium III 800 MHz MMX or equivalent processor
- 128MB RAM (256M recommended)
- 600MB free disk space
- 4 x CD-ROM drive
- Standard mouse and keyboard

If your computer meets these requirements, you can proceed and install the Total Media software that is included with your player:

WINDOWS 98 OPERATING SYSTEM

- Put the Total Media CD into your PC's CD-ROM drive.
- Click the Install ICON on auto-run window and then click NEXT. A Step Bar will appear, showing the necessary installation steps.
- After installation, choose "yes" to restart the computer.

WINDOWS ME/2000/XP OPERATING SYSTEM

- Insert the device directly into your computer's USB port.
- A "Removable Disk" will appear on "My Computer".

BATTERY INSTALLATION

1. Remove the locking screw on the battery compartment door with a Phillips head screwdriver.
2. Push in slightly on the battery compartment door (see illustration) and pull down.
3. Install 1 x AAA battery with the positive (+) end facing out towards the door.
4. Close and lock the battery compartment door when finished.
5. Replace and tighten the locking screw.

GETTING PLUGGED IN

1. Make sure your PC supports USB devices.
2. Gently remove the USB port cover (see illustration).
3. Use the supplied USB cable to connect the Lipstick MP3 Player's USB port to the USB port on your computer. The Liptunes™ MP3 player should appear as a removable drive in 'My Computer'.

TO DISCONNECT:

FROM WINDOWS 98 OPERATING SYSTEM:

- Disengage the USB cable from the PC's USB port (while the Liptunes player is not being used). The "Removable Disk" icon will disappear.

FROM WINDOWS ME/2000/XP OPERATING SYSTEM:

- Double click the icon "put out or eject the hard disk" on right bottom of the task bar.
- Select "USB Mass Storage Device" and click "Stop".
- Click "Enter", and you can safely disconnect the USB cable from the Liptunes™ player.



Liptunes™ MP3 Player (Item #309246)

USER'S MANUAL



INTRODUCTION

Now that you've scored this cool Liptunes™ MP3 Player, get ready to make a serious fashion statement. Fully compatible with MP3 and WMA digital audio formats, this petite performer is like traveling with the band! Your favorite tunes are with you 24/7! Before you race out to amaze all your friends with your new musical powers, take a few minutes to review these tips and instructions. They'll help get your Liptunes running and special songs will always be at your fingertips.

PRODUCT FEATURES


Take a moment to review the features provided by your Liptunes™ MP3 Player:

- Plays MP3 and WMA digital music files.
- Built-In 256MB memory stores approximately 60 songs*.
- Auto Power-Off function saves energy by turning unit off after 60-seconds when not in use.
- Illuminated multi-function display w/adjustable contrast provides an at-a-glance readout of track number, track title, battery life, elapsed time and volume.
- Standard USB port makes it easy to transfer music back and forth between your MP3 player and your computer.
- Rocker-style MODE switch lets you skip forward or backward to find a particular track quickly.
- Built-in digital voice recorder w/microphone.
- Built-in 6-mode equalizer.
- Repeat play mode.
- Detachable neck loop keeps your Liptunes™ within reach but hands-free.
- Total Media software to create your own WMA music files.

*Varies, depending on song length.

QUICK START

Use the buttons and features shown in the illustration below to operate your Liptunes MP3 player.

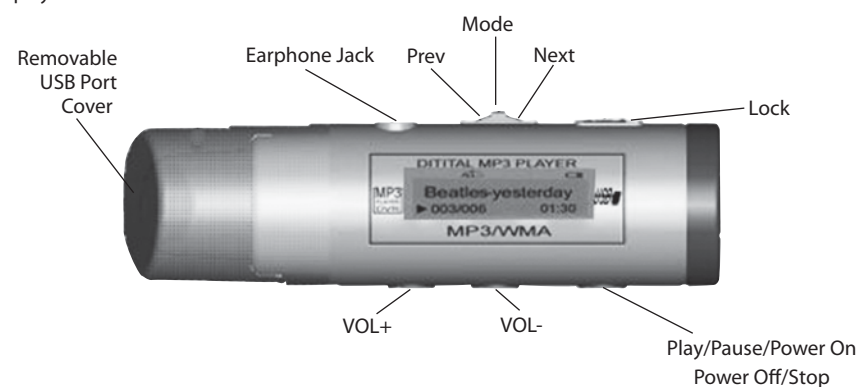

CREATING WMA FILES:

Once you have installed the software, you can convert, or 'rip' tracks from any CD. Open the Total Media application and follow the on-screen directions.

IMPORTING WMA or MP3 FILES:

Your Liptunes™ MP3 Player comes with a built-in USB port to make loading and arranging digital music files easy. You can import digital music files into your Liptunes™ player in two ways:

- Use the supplied Total Media software to select and transfer desired tracks (See instructions provided with Total Media software for details).
- Drag & drop MP3 and WMA files stored on your computer's hard drive. To do this:
 1. Turn on the power to your Liptunes™ MP3 player (see below) and to your computer.
 2. Make sure you've followed the correct steps to make a USB connection.
 3. Highlight the MP3 or WMA selections you want to copy onto the MP3 player and use the mouse to drag and drop them onto the Liptunes™ MP3 Player icon on the desktop.

IMPORTING TRACKS FROM A CD:

Before you can listen to tracks from a CD on your MP3 player, they need to be compressed into WMA format. You can do this with the supplied Total Media software (see Creating WMA Files above).

USING YOUR MP3 PLAYER:

1. Turn the unit ON by pressing and holding the PLAY/PAUSE button until the Multi-Function Display becomes visible.
2. Press and hold the PLAY/PAUSE button to begin or stop playback.
3. To turn the unit OFF, when you are done, press and hold the PLAY/PAUSE button for at least two seconds after playback has stopped. You will see the words 'Bye-Bye' in the display just before the unit shuts down.

MULTI-FUNCTION DISPLAY:

The LCD screen features information to make using your Liptunes™ MP3 Player easier and more enjoyable. You'll find:

- The SCROLLING TITLE DISPLAY shows the title of the track currently being played.
- The BATTERY INDICATOR appears in the upper right corner as a series of black bars (which decrease as the battery power is used.) Once the bars are three-quarters gone, replacing the battery is recommended for best performance.
- The TRACK INDICATOR is visible under the scrolling title display. The first number identifies the current track being played. After the slash, the second number recaps the total number of tracks stored in memory.
- The ELAPSED TIME INDICATOR, in the lower right-hand corner of the display, provides a running tally (in minutes and seconds) of the length of the track being played.

ADDITIONAL FEATURES AND FUNCTIONS:

Using the MULTI-FUNCTION DISPLAY together with the MODE button provides access to various settings and features. Normally when Liptunes™ is turned on it is in the MUSIC mode. Pressing the MODE button down once will highlight the following sub-menus (appearing in the order shown here):

MUSIC	Music playback mode. Press the MODE button to the right to highlight VOICE playback mode.
VOICE	Voice playback mode. Press MODE button down until you see the voice recording you wish to play. Use the PLAY/PAUSE button to start and stop playback. When finished, press the MODE button to the right to highlight RECORD mode.
RECORD	Record menu. Press the MODE button down to begin recording. Elapsed recording time will be visible in the display. Press the MODE button down again to stop recording. Press the MODE button to the right to highlight ERASE FILE mode.
ERASE FILE	Delete audio file(s). Press the MODE button down once to access ERASE FILE menu options: <ul style="list-style-type: none"> - Delete Music: To delete a music file, press the MODE switch to the right until DELETE MUSIC appears. Press the MODE button down again. Press the MODE button to the right until the music file to be deleted is displayed. Press the MODE switch down again. A sub-menu will appear confirming your choice. Press PLAY/PAUSE button to delete the selection. Press either VOLUME button to return to main ERASE FILE menu. - Delete Voice: Press MODE button to the right to access DELETE VOICE MODE. Press the MODE switch to the right or left until the desired voice file appears in the display. Press the MODE switch down again to delete the displayed track. A sub-menu will appear confirming your choice. Press PLAY/PAUSE to delete the selection. Press either VOLUME button to return to the main ERASE FILE menu. Press the MODE button to the right to highlight the SETTINGS menu.

MODE SWITCH:

When you are not in a menu screen, press the MODE button to the left or the right to skip to the beginning of the next track or return to the beginning of the song in play. Pressing the MODE button repeatedly can help to quickly find the beginning of any selection in memory. The TRACK INDICATOR will change each time the MODE button is pressed.

VOLUME:

Press the '+' or '-' button to raise or lower the volume. As the volume is adjusted, a bar graph display will appear on screen to show the loudness level (from minimum to maximum).

HOLD:

This sliding switch helps prevent accidental mishaps while you and your Liptunes™ MP3 Player are in motion. Slide it to the right to activate. With HOLD activated, the player will continue to function, but the volume cannot be adjusted and power cannot be turned off. Deselect HOLD (slide the switch to the left) to unlock the player and make desired adjustments.

NECK STRAP:

Allows you to hang your Liptunes™ around your neck. The supplied neck strap attaches to the unit via the small plastic connector tied with black string to the belt clip. Gently push the connector from the strap onto the connector attached to the unit to use the neck strap. It should snap into position. Push in on each side of the connector to release.

BELT CLIP:

This spring-activated clip provides a safe, secure way to attach the player to a belt or pocket for more convenient on-the-go listening.

BATTERY SAFETY

- To get the best performance out of the player, we suggest using alkaline batteries.
- Do not throw used batteries into fire, and do not charge, short circuit, disassemble or heat them because it is dangerous.
- Bring spare batteries with you, if you going on a long trip.
- Do not charge non-rechargeable batteries.
- Rechargeable batteries should be removed from the device before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed and replaced with new ones before operating.
- Do not dispose of batteries in fire; they may leak or explode.
- Batteries should be replaced by an adult.
- The supply terminals should not be short circuited.

SETTINGS:

Enter preset equalizer menu and other settings. Press the MODE button to the right to highlight the following sub-menus:

EQ SET	This menu lets you control tonal output. Press the MODE button once to highlight NORMAL. Press again to highlight ROCK. Press again for JAZZ. Press again to highlight POP. Press again for CLASSICAL. Once you've selected your listening preference, press the MODE button down again to confirm and return to the SETTINGS menu. Press the MODE button to the right to highlight PLAY MODE menu.
PLAY MODE	Press the MODE button down to access the PLAY MODE menu. Here you can adjust how Liptunes™ will function in the play mode. Press the MODE button to the right once for NORMAL playback. Press the MODE button to the right again to repeat the current selection. Press the MODE button again to repeat all selections in memory. Press the MODE button to the right again to play all tracks in random sequence. Press the MODE button to the right again to shuffle (or rearrange) the playback sequence of all tracks. Press the MODE button to the right again to preview the first few seconds of each track in memory. Once you have displayed your preferred Play Mode setting, press the MODE button down to confirm and return to the SETTINGS menu. Press the MODE button to the right to highlight the CONTRAST menu.
CONTRAST	Press the MODE button to the right or left to adjust the display's contrast level. When finished, press the MODE button down to confirm. Press the MODE button to the right to highlight BACKLIGHT menu.
BACKLIGHT	Press the MODE button down to access the BACKLIGHT menu. Press the MODE button to the left or right to select how long the backlight display remains active after a button has been pressed (from 0 to 60 seconds). HINT: Using longer backlight display will use more battery power. Press the MODE button down to return to the SETTINGS menu. Press the MODE button to the right to highlight POWER SET menu.
POWER SET	Press the MODE button down to access POWER SET mode. Press the MODE button to the left or the right to turn the unit off automatically after 2-minutes or 5-minutes of inactivity. Once you have made your selection, press the MODE button down to return to the SETTINGS menu. Press the MODE button to the right to highlight the RECORD SET menu.
RECORD SET	This menu displays several factory settings, including ENCODING, CHANNELS, DEVICE TYPE, SAMPLING RATE, BIT RATE and MODE. These cannot be changed, but you can check them any time you like. When finished, press the MODE button to the right to highlight the LANGUAGE menu.
LANGUAGE	The Liptunes™ player menus can be displayed in a variety of different languages. Press the MODE button down to access the LANGUAGE options. Then press the MODE button to the right to scroll through your options. Once you find your preferred display language, press the MODE button down to confirm. Press the MODE button to the right to exit the SETTINGS menu. Press the MODE button to the right again to highlight the ABOUT menu.
ABOUT	Internal memory information and player information. This can be seen in a scrolling display of system information. Press the MODE button to the right to highlight EXIT.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The power turns off suddenly and pressing the "Play/Pause" button does not activate the player.	The battery is dead.	Replace the battery.
Nothing happens when the buttons are pressed.	The battery is dead.	Replace the battery.
After connecting to a PC, Liptunes™ does not seem to communicate with computer.	Bad connection. Disabled port..	Make sure all USB connections are snug and tight. Make sure USB port on PC is enabled (See your PC's owner's manual). For Windows 98, make sure the correct USB driver is installed. (See Total Media software documentation.)

Warning

To avoid electrical shock, never attempt to break or open the player and touch the electrical component while it is charged. No user serviceable parts are inside.