

Jeopardy!® Buzzer Programming Guide

IMPORTANT! FOLLOW THESE STEPS COMPLETELY TO PROGRAM THE BUZZERS:

1. After the Game Unit and DVD Player are connected, load the Jeopardy! DVD. (Fig. A)


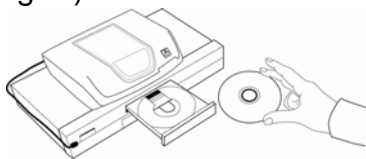


Fig. A


2. Using your DVD remote, choose “Buzzer Setup” from the Setup Menu and press Enter (or OK).

3. Hold the DVD Remote against the **GAME BASE WINDOW** (Fig. B). (Important Note: The remote *must* be held an **inch or less** from the window. Any greater distance may result in programming errors.)

4. When prompted, *quickly* press and release the Left Arrow Button ◀ then, *press again* when prompted.

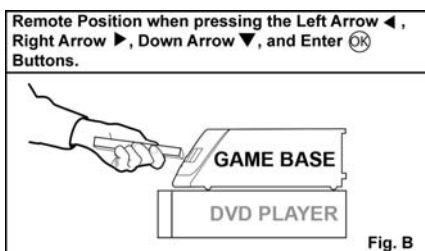

5. Point the DVD Remote at the **DVD PLAYER** and press the Next or Chapter Skip Button ►► when prompted (Fig. C).

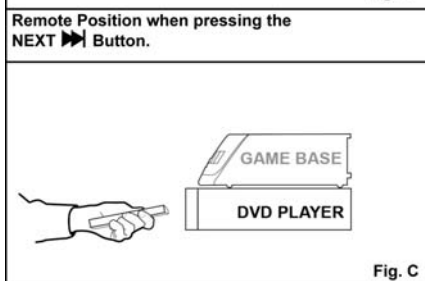

6. Repeat steps 3 through 5 to program the Down Arrow Button ▼, the Right Arrow Button ▶ and the ENTER (or OK) Button OK.
7. The game will automatically start once the buzzers are programmed successfully.

NOTE: If you are not able to program the buzzers, please refer to the Jeopardy! DVD Game Troubleshooting Website at www.mgae.com/jeopardy/help/, or contact Customer Service at 1-800-222-4685.

NOTE: Game is not compatible with DVD Players embedded in televisions or other devices. Other DVD Players may not be compatible. Refer to the Jeopardy! DVD Game Troubleshooting Website for more information.