

SAFE BATTERY USAGE (con't)

- Use only the type of battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix different types of batteries or old and new batteries.
- Use alkaline batteries for best performance and longer life.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

Please keep this manual as it contains important information.

www.rescue-pets.com
 RESCUE PETS™ used under exclusive license
 from AAA, JUST BORN, WAKE ME UP™,
 MYEPETS.COM™, DIGI-TAILS™ and all other
 materials, including character art, the pets
 themselves and all related artwork, logos, designs
 and packaging are property of MGA Entertainment.
 16300 Roscoe Blvd.,
 Van Nuys, CA 91406 USA
 (800) 222-4685
 Printed in China

The preferred method of contact for
 Customer Service is through our e-mail
 contact form at www.mgae.com



0607-1-E/INT



Ages 3+

Item no.: 364146

ADULT BATTERY INSTALLATION REQUIRED

 
INTRODUCTION

This little Rescue Pet acts just like a real puppy - he really drinks water, burps, and then lifts his leg and pees! Plus he chews on his bone and sits or stands on command.

CONTENTS

Welcome your Rescue Pet to your home by making sure the package contains:

- a. 1 Rescue Pets™ Train and Play Puppy
- b. 1 Collar Tag
- c. 1 Sticker For Name Tag
- d. 1 Adoption Certificate
- e. 1 House Training Mat
- f. 1 Dog Bone
- g. 1 Water Bottle


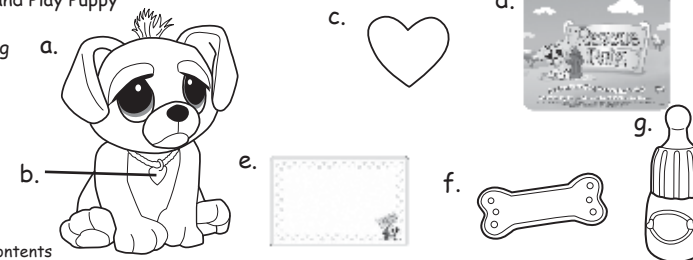


illustrations may vary from contents

BATTERY INSTALLATION

Battery installation and replacement should be performed by an adult.

1. Pull open the plush opening located at the back of the pet. (Fig. 1).
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover. (Fig. 2).
3. Insert four (4) 1.5V AA batteries (not included) with the positive (+) and negative (-) ends facing the proper direction as indicated inside the battery compartment.
4. Replace the battery compartment cover and tighten the screw.
5. Move the "ON/OFF" switch to ON.
6. Close the Plush back opening to cover the battery box area.

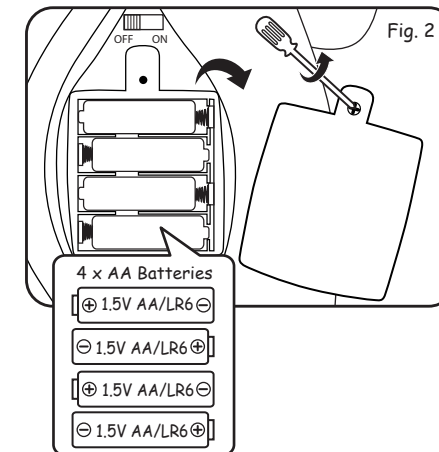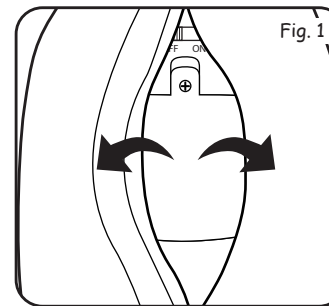

QUICK START

SITTING, STANDING AND SPEAKING

1. If your Puppy is in a sitting position, clap your hands once and he will rise into a standing position. (Fig. 3)
2. If your Puppy is in a standing position, clap your hands once and he will go back into a sitting position. (Fig. 4)
3. Clap your hands twice and your Puppy will sit on his hind legs, raise and lower his front paws, and bark!

FEEDING TIME

Dog Bone:

1. Put the Dog Bone into the Puppy's mouth. (Fig. 5)
2. The Puppy will lean forward and make chewing noises with the bone in his mouth. (Fig. 6)
3. After about 3 - 4 seconds, the Puppy will stop chewing and rise back up into a sitting position.
4. Take the Dog Bone out of the Puppy's mouth.

Water Bottle:

1. Unscrew the cap of the Water Bottle counter-clockwise and lift it off.
2. Fill the Water Bottle to the fill line marked "MAX" with clean, clear water.
3. Replace the cap on the Bottle.
4. Hold the Puppy up with your hand on the back of his head.
5. Place the tip of the Water Bottle into the Puppy's mouth. Push the bottle down firmly, then squeeze it gently to help your Puppy drink. He will begin to make drinking noises and really drink the water! (Fig. 7)

NOTE: When holding the Puppy this way, do not touch his tail, otherwise you will activate his pee function!






6. After 3 - 4 seconds, the Puppy will finish drinking and will burp when the bottle is removed from his mouth.
7. If you give your puppy too much water, the overflow will pour out of his mouth.

⚠ CAUTION: NEVER give the Puppy any liquids other than clean, clear water as this can cause irreparable damage!

NATURE CALLS! (PEE FUNCTION)

Uh-oh! Puppy drank too much water and now he has to pee! Help train him to go on the training mat and not on your expensive new Persian rug! To do this:

1. Place the House Training Mat underneath your Puppy's hind legs.
2. Gently squeeze the base of the Puppy's tail. (Fig. 8)
3. The Puppy will stand up and raise his hind leg three to four times. Each time he lifts his leg, a small stream of water will come out.
4. Any water that hits the House Training Mat turns the Mat blue!
5. After 3 - 4 seconds, the Puppy will go back into his sitting position.

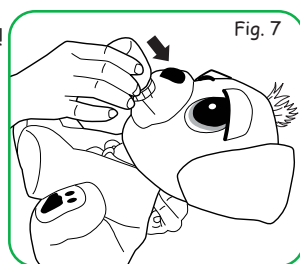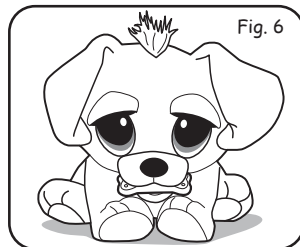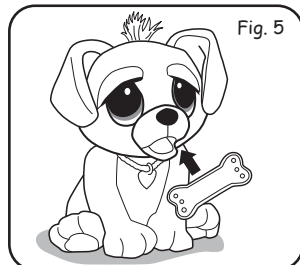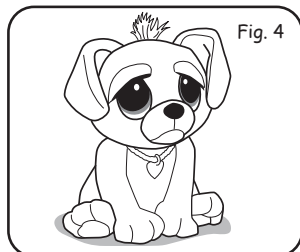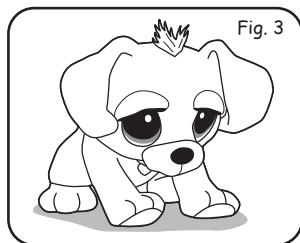

QUICK START (con't)

NOTE: Sometimes the Puppy has to lift his leg a few times before water comes out.

NOTE: It is recommended that you add a paper towel underneath the House Training Mat for better absorbency.

SLEEP MODE

If the Puppy is not played with for 60 seconds, he will quietly go into Sleep Mode. To resume play, simply squeeze his tail or place the Bone or Bottle in his mouth.

ADOPTING YOUR RESCUE PET

Officially adopt your Rescue Pets™ Train and Play Puppy by filling in the adoption certificate information. To do so, go to:

- a. www.rescue-pets.com
- b. Click on "Adoption Center."
- c. Click on the picture of your pet.
- d. Fill in the Adoption Certificate.
- e. Click on "Create Certificate."
- f. Click on the size of Certificate you wish to print from "Print Options".
- g. Click "Print", and then click "Done."
- h. You have officially adopted your very own Rescue Pets™ Train and Play Puppy!

There are many more fun things to do on www.rescue-pets.com. Check it out and keep coming back.

Don't forget to write your Rescue Pet's name on the heart-shaped sticker and apply the sticker to the tag on its collar.

TROUBLESHOOTING

- If the motion of your Rescue Pet Train and Play Puppy becomes slow and/or the voice becomes weak, replace the batteries with fresh AA Alkaline batteries.

CLEANING INSTRUCTIONS

Training Mat:

After play, allow the Training Mat to air dry in a well ventilated area. Do not wipe the Training Mat with a cloth or tissue as permanent color damage may occur to the Training Mat.

Train N' Play Puppy:

Make sure that you empty all of the water out of your Train and Play Puppy before you store it. Do this by squeezing the base of the Puppy's tail repeatedly until no water comes out.

NOTE: If the Puppy is turned upside down when water is inside, some water will leak out through the mouth.

To clean your Pet, brush it with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove any stains.

IMPORTANT:

The Puppy and Training Mat will get a little wet during play. Allow them to air-dry in a well-ventilated area after play. Also, be sure to follow these important rules:

- DO NOT put your Pet or Training Mat into the washing machine.
- DO NOT use detergent or stain removers on the Pet or Training Mat.
- DO NOT submerge your Pet or Training Mat in water or expose them to heavy moisture.
- Wipe dirt off immediately to prevent stains.
- DO NOT put the Pet or Training Mat into a dryer or dry them with a blow-dryer.
- If the Pet is accidentally immersed in water, remove the batteries immediately and let the Pet air dry. Once the Pet is dry, replace the batteries.
- Do not store the Pet for long periods of time without removing the water and batteries.

SAFETY INSTRUCTIONS

⚠ CAUTION:

- DO NOT sit or stand on any part of the Pet.
- Avoid spilling food or beverages on the Pet.
- DO NOT throw or kick the Pet.
- DO NOT push sharp objects through the speaker openings.
- DO NOT submerge Pet in water.